


B&G MYC Chartplotter Course Selection



1. Press and Hold to turn unit ON / OFF (Touch Screen)

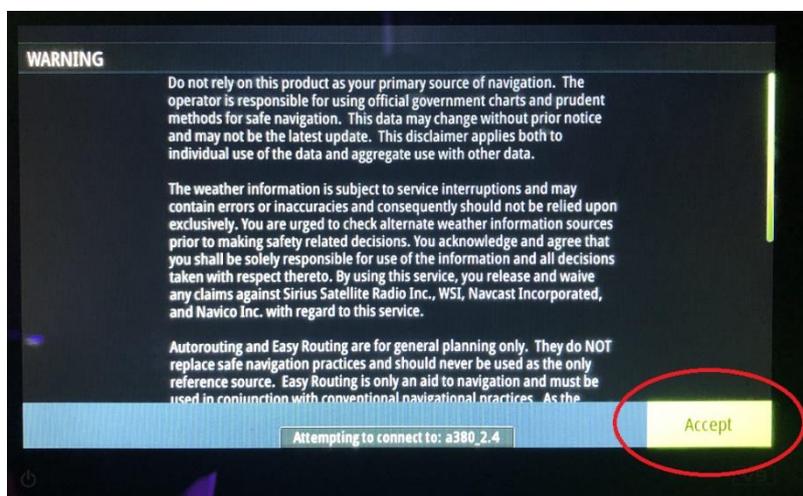


“Accept” Conditions


Once accepted the following screen will appear, please select the Home Page Icon.




The Home Screen will appear, please select **Waypoints**

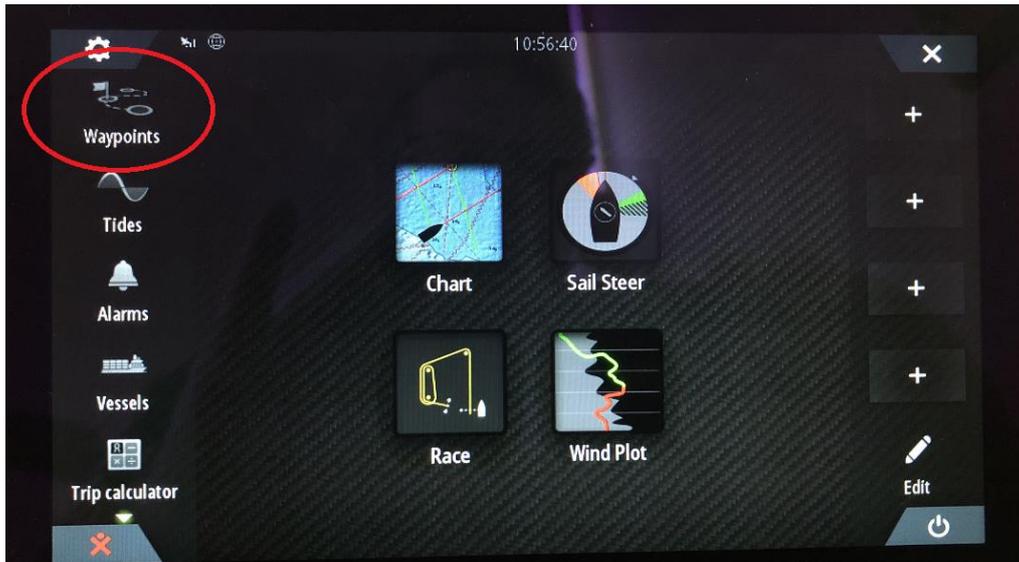


Select **Routes** and **Find**

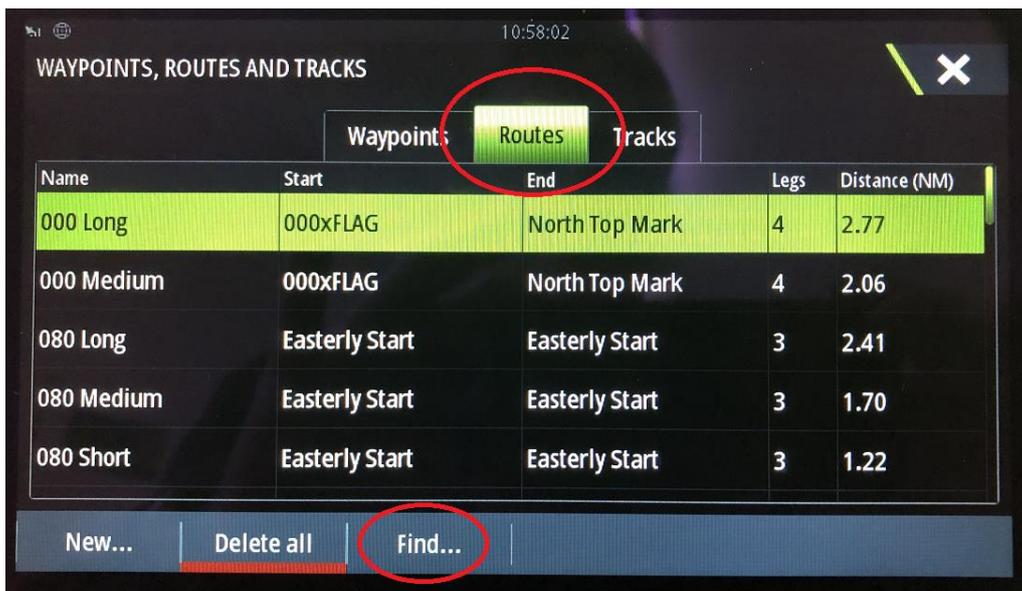

Touch the **Name Screen**, a keyboard will appear, now type the wind direction, e.g. **200** 'ENTER'

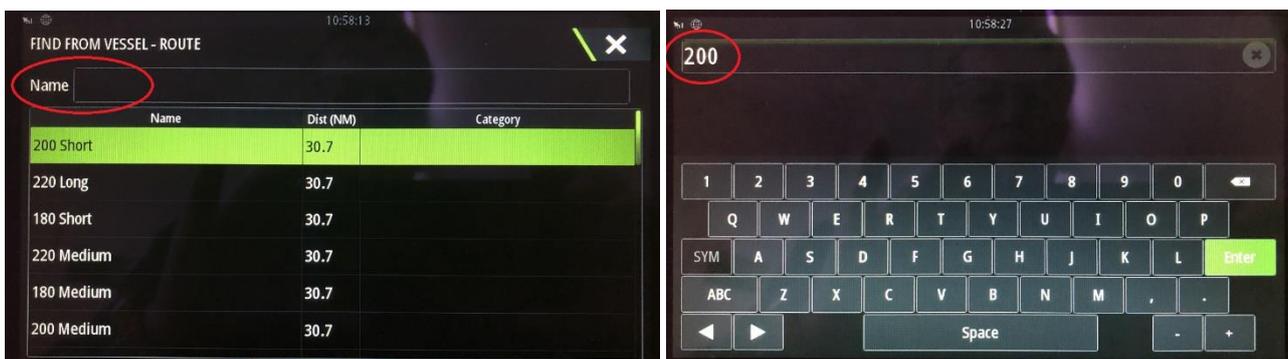

The following **Route (Course) Options** will appear for **Wind Direction 200**
 Make a choice of **Long (1x.7x.7Nm)**, **Medium (.7x.49x.49Nm)** or **Short (.5x.3x.3Nm)** to suit
 the **Race Conditions**

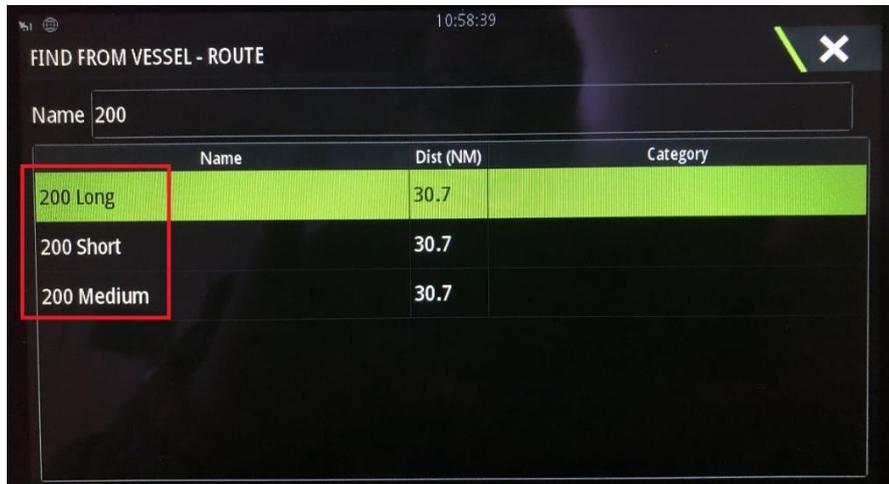

Touch the Screen to select **200 Long**, Select the Option to **Display** and **Save**



Once **Save** is pressed, the chart plotter will return to the chart screen with the **Course** and **Marker Locations** displayed, allowing the course to be set.

